

BatteryShip.com

F21918595 Palm M130 Series Battery Installation Instructions

PLEASE NOTE: Patience and care, along with moderate technical and hand tool ability, are required for the successful replacement of a Palm battery. **Excessive force may result in damage to your PDA.** The instructions below come with no warranty or guarantee. By utilizing these instructions, you agree to hold Batteryship.com blameless and unaccountable for any and all damages, problems, or personal injuries that may or may not arise by your use of these instructions. Replacing your Palm battery may void your Palm warranty. **Please read all instructions and back up your data BEFORE replacing the battery.**

Included White T6 Torx Screwdriver



Included Blue T5 Torx Screwdriver



Included Plastic Flathead Screwdriver




Step 1.



Remove the four screws on the back of the PDA. They will be either T5 or T6 Torx screws. We include both screwdriver sizes. First try removing the screws using the included Torx T6 screwdriver (clear handle). If it is the wrong size, then use the T5 (blue handle). It is important to try the T6 first to avoid stripping the screws. Set the screws aside for reassembly.

Step 2.

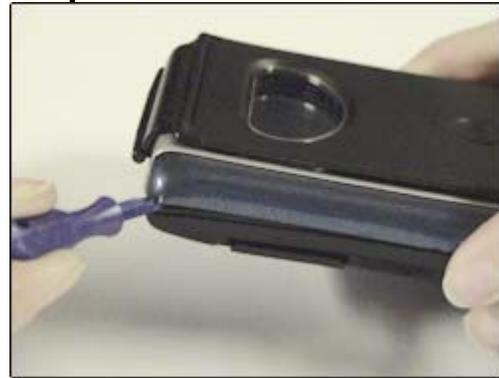

Once the screws have been removed, GENTLY pry open the Palm case (starting at either top corner, as shown) using the included plastic screwdriver or any small flathead screwdriver. Pry all around the device until the front cover comes open completely, but **DO NOT** remove it yet.

Step 3.



The cover around the display screen can be removed, but the display screen will remain connected to the motherboard by a ribbon cable. Do not attempt to disconnect it. Be sure to support it with one hand while removing the battery. Remove your old battery from its seat, using the enclosed plastic flathead screwdriver to assist (as shown) if necessary. **Leave the connector plugged in.** The battery will be glued in, so pry under it GENTLY until it comes loose. Take care not to break the old battery while removing it.


Step 4.



Remove the pull tab at the back of the Palm, then remove the motherboard from the back case and flip it so you see the battery connector, as shown. If the motherboard does not come out easily, try pressing upward from the port at the bottom of the palm. The power port connector is attached to the motherboard, but can get stuck to the back case.

(Steps 5 & 6 continued on back)

Step 5.

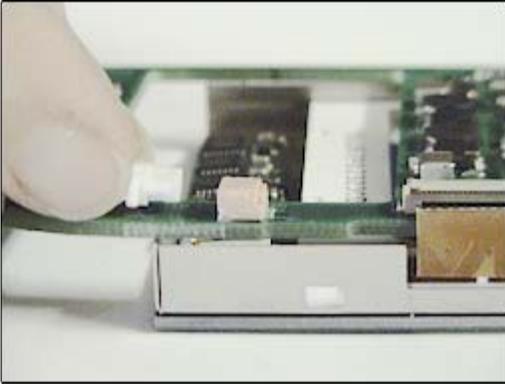

Disconnect the old battery at the connector by CAREFULLY pulling outward on the connector with your thumb and forefinger. Be very sure that you are pulling outward on only the part of the connector that comes out, as shown, NOT on the whole connector.

Step 6.



Making sure that your battery is facing the right direction (ribbon cable towards the connector), connect the new battery by pressing the connector at the end of the ribbon cable into the socket as shown. Note the location of the prongs in the socket of the Palm and the location of the plugs for the prongs on the battery connector, and connect them accordingly. Do not press too hard or try to force the pieces together. They will fit easily when correctly aligned.

Step 7.



Reassemble the Palm: Snap the motherboard back into place so that the power port connector shows through the bottom of the device, as shown. Place the battery in its seat, then place the display screen over it. Press the front cover of the Palm on over the display screen and motherboard, making certain that all parts have been properly replaced, and screw the four screws back in. FULLY CHARGE your new battery before use. (Allow at least three hours. For quality control, we pre-charge many of our batteries, so yours may require less time.)

PLEASE NOTE: Our tools fit the majority of Palms, but some devices may have different screws installed for various reasons. If our tools do not fit your device, you may have the appropriate tool in a tool kit you already own. You can also check your local hardware or electronics store if you do not have the right tool at home.